GROUP A



Floating head system



Adjustable rear roller



Mechanical breakaway



Oil cooler with thermostat (option only for TA32 and TAR32)






HP Tractor	20	25	30	35	40	Min. tractor weight Kg	Min. tractor width
TA26						700	1,00
TA32						900	1,20

# Working positions (m)

		TA26	TA32		
Α	m	2,70	3,24		
В	m	3,10	3,63		
С	m	1,50	2,10		
D	m	1,40	1,86		
E	m	2,20	2,78		
T	m	1,40	1,57		
L	m	0,80	0,86		
M	m	1,40	1,70		
N	m	1,40	1,38		
0	m	1,60	1,95		
P Z	m	0,87	0,86		
Z	m	0.65	0.65		

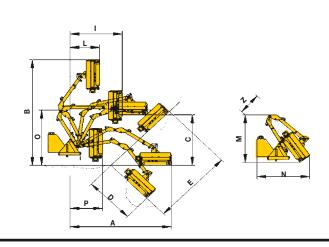

#### Technical data

Model	Max horizontal reach*	Weight	Articulated Y blades	Oil	Rotor	Pto	Flail head angle
	m	Kg	n.	1	Rpm	MAX Rpm	
TA26	2,70	258	40	47	3.000	540	190°
TA32 - TAR32	3,24	330	40	58	3.000	540	190°

<sup>\*</sup> Reach measured from tractor centre line to head edge.

# Machines with cable controls "Classic"

Model

TA26 with flail head TME80 m 0,80

TA32 with flail head TME80 m 0,80

Version for tractors with reversible drive

TAR32 with flail head TME80 m 0,80

## Machines with electric controls "Electra"

Model

TA26 Electra with flail head TME80 m 0,80

TA32 Electra with flail head TME80 m 0,80

Version for tractors with reversible drive

TAR32 Electra with flail head TME80 m 0,80

## Option

Stabilizers to the tractor for TA32-TAR32 (cod. TD36float01)

"Delta yoke" for stabilizer for TA32-TAR32 (cod. TD3703)

Stabilizer for "Delta yoke" for TA32-TAR32 (cod. TD3704)

Oil cooler with thermostat for TA32 (cod. TD3213) and for TAR32 (cod. TD3213SX)

Flail head	TME80
Width (m)	0,80
Rotor speed (rpm)	3000
Blade tip speed (m/sec)	48
Flail head angle	190°
Weight (Kg)	80



#### Flails TME80

Articulated Y blades for: grass, shrubs, Ø max 2 cm



Cod. 0901133

n° 40



## Equipped with:

- Flail head
- Totally independent hydraulic (gear pump and motor)
- FLOATING head system
- Mechanical breakaway (arm protection in case of obstacles)
- Reversible rotor by cable
- Gearbox and pumps directly connected to pto for TA26
- Front and rear abrasion resistant guard for flail head
- Pto shaft for TA32 and TAR32
- Oil

### Warning

IT IS RECOMMENDED that the connection between tractor and shredder and its setting up should be made with the Dealer according the instructions and warnings listed on our Use and Maintenance Manual. For further information please contact our after sales service.