

GROUP A




HYDRAULIC REACH MOWERS




Floating head system




Adjustable rear roller

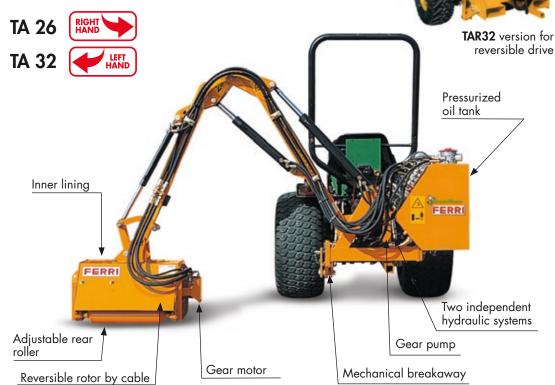

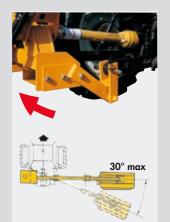

Mechanical breakaway

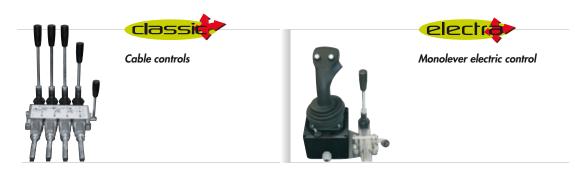




Oil cooler with thermostat (option only for TA32 and TAR32)

HP Tractor →	20	25	30	35	40	Min. tractor weight Kg	Min. tractor width
TA26						700	1,00
TA32						900	1,20

Working positions (m)

		TA26	TA32	
Α	m	2,70	3,24	
В	m	3,10	3,63	
С	m	1,50	2,10	
D	m	1,40	1,86	
E	m	2,20	2,78	
T	m	1,40	1,57	
L	m	0,80	0,86	
M	m	1,40	1,70	
N	m	1,40	1,38	
0	m	1,60	1,95	
P Z	m	0,87	0,86	
Z	m	0.65	0.65	

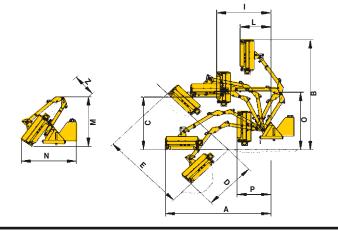

Technical data

Model	Max horizontal reach*	Weight	Articulated Y blades	Oil	Rotor	Pto	Flail head angle
	m	Kg	n.	1	Rpm	MAX Rpm	
TA26	2,70	258	40	47	3.000	540	190°
TA32 - TAR32	3,24	330	40	58	3.000	540	190°

^{*} Reach measured from tractor centre line to head edge.

Machines with cable controls "Classic"

Code	Model
TA26RSFNM08WC	TA26 with flail head TME80 m 0,80
TA32LSFNM08VC	TA32 with flail head TME80 m 0,80

Version for tractors with reversible drive

AR32LSFNM08VC TAR32 with flail head TME80 m 0,80

Machines with electric controls "Electra"

Code	Model
TA26RSCNM08WC	TA26 Electra with flail head TME80 m 0,80
TA32LSCNM08VC	TA32 Electra with flail head TME80 m 0,80

Version for tractors with reversible drive

AR32LSCNM08VC TAR32 Electra with flail head TME80 m 0,80

Option

Code	Length cm	
TD36float01	(640-890)	Stabilizers to the tractor for TA32-TAR32
TD3703		"Delta yoke" for stabilizer for TA32-TAR32
TD3704	(470-720)	Stabilizer for "Delta yoke" for TA32-TAR32
TD3213		Oil cooler with thermostat for TA32
TD3213SX		Oil cooler with thermostat for for TAR32

Flail head	TME80
Width (m)	0,80
Rotor speed (rpm)	3000
Blade tip speed (m/sec)	48
Flail head angle	190°
Weight (Kg)	80



Flails TME80

Articulated Y blades for: grass, shrubs, Ø max 2 cm



Cod. 0901133

n° 40



Equipped with:

- Flail head
- Totally independent hydraulic (gear pump and motor)
- FLOATING head system
- Mechanical breakaway (arm protection in case of obstacles)
- Reversible rotor by cable
- Gearbox and pumps directly connected to pto for TA26
- Front and rear abrasion resistant guard for flail head
- Pto shaft for TA32 and TAR32
- Oil

Warning

IT IS RECOMMENDED that the connection between tractor and shredder and its setting up should be made with the Dealer according the instructions and warnings listed on our Use and Maintenance Manual. For further information please contact our after sales service.